




World Leaders in RC
Power Supply Systems

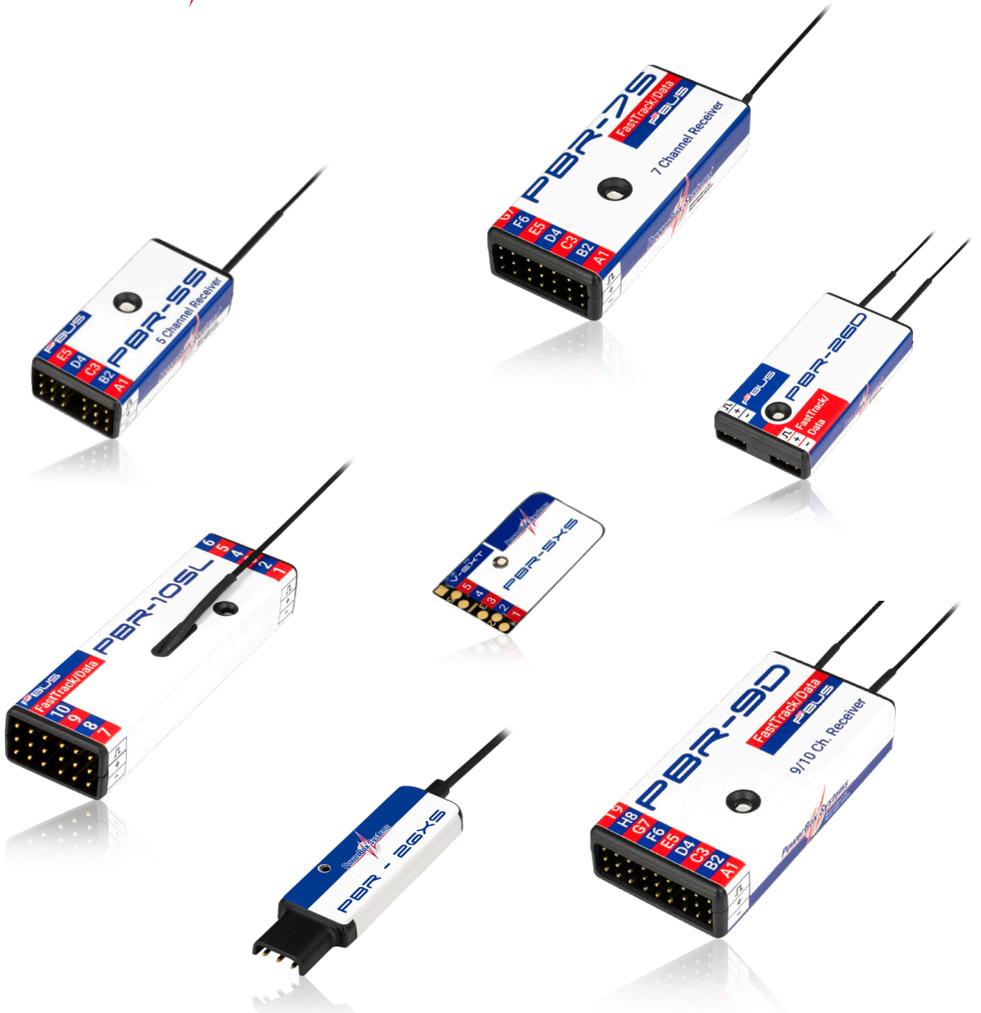

POWERBOX RECEIVER

PBR-5XS • PBR-5S • PBR-7S • PBR-9D • PBR-10SL • PBR-26XS • PBR-26D

Dear customer,

We are delighted that you have decided to purchase a **PowerBox transceiver**, which almost certainly represents the most highly developed and most advanced transmitting and receiving system for your valuable models available anywhere in the modelling world. Unprecedented range in the 2.4 GHz band, and ultra-fast, ultra-precise data transfer in both directions - these are the outstanding features of this radio system.

1. PRODUCT DESCRIPTION

If you study the specifications closely, it is clear that PowerBox receivers are by no means "receivers" in the usual sense; they are "transceivers". They are capable of transmitting and receiving at the same data rate and the same range as the associated system transmitter.

All **PowerBox transceivers** feature a radio chip, but an essential difference is the integral pre-amplifier, which is one of the factors which make the system's extremely long range possible. The **PowerBox radio** link is a hopping system which uses at least 66 of 198 possible channels. An intelligent hopping sequence is employed, ensuring interference-free operation even when the frequency band is heavily used.

The suffix D, S/XS or SL indicates the number of radio units installed in the transceiver. The D types **PBR-9D** and **PBR-26D** incorporate two fully independent receive / transmit units.

Other systems feature two aerials, switching between them 50-50, but if one aerial loses the signal, 50% of the information is inevitably lost; our design does not suffer that drawback. There are also no switching diodes which have a damping effect on the signal as it arrives; this has a particularly adverse effect on the radio chip.

In contrast, both the receive units in PowerBox transceivers pick up the data packet in undamped form, and subject it to a full analysis. If one of the two packets contain errors, or if the signal strength is poor, or if the signal is completely absent, the data packet picked up by the other receive unit is used, and passed to the servo outputs or digital outputs. The result is a 100% signal even if one aerial is completely blocked.

As of software **version 3.5** it is possible to connect a supplementary receiving unit, such as the **PBR-26**, to the FastTrack socket of receiver types PBR7, PBR9 and PBR10. If the primary receiver should receive no data from its integral aerials, the gap is filled seamlessly with the data from the "satellite receiver".

A further important feature is the integral iGyro system. The **PBR-7S, PBR-9D, PBR-10SL** and **PBR-26D** receivers have the iGyro software installed as standard, providing control of six separate axes. To make use of the iGyro all you have to do is connect an **iGyro SAT** to the FastTrack socket. If the integrated iGyro detects a **GPSIII** or a **PBS-TAV** sensor on the **P²-BUS**, the gyro gain is even speed-compensated!

All iGyro settings can be adjusted conveniently from the transmitter using the Telemetry menu.


All PBR receivers are capable of generating various BUS signals at the FastTrack socket, in order to maintain compatibility with third-part products such as helicopter gyros. In addition to **S.BUS** and **SRXL**, as of Version 3.5 an analogue **PPM** signal can also be available.

One feature which is unique in the market is the facility to update receivers from the transmitter. You do not even need to remove the receiver or receivers from the model, or connect to the model using a laptop and USB interface, in order to update the receiver software.

FEATURES:

- 2.4 GHz transceiver matching the **PowerBox radio control system**
- One or two receive units
- Extreme interference rejection
- Ultra-long range
- Integrated high-performance six-axis iGyro software
- iGyro system with speed-compensation
- High-performance real-time telemetry transfers 800 values/second
- Integral telemetry for reception quality and battery voltage
- Various Bus systems for compatibility with third-party products
- Receiver updates from the transmitter
- Compact format

2. FEATURES AND CONNECTIONS

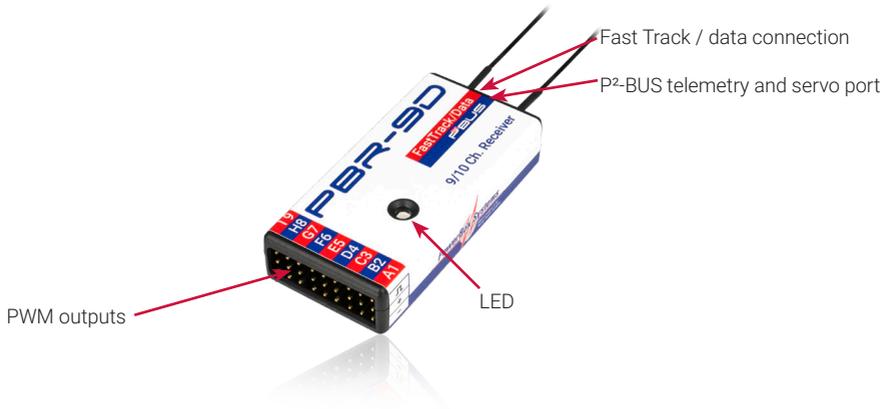

3. POWER SUPPLY

To ensure that **PBR receivers** are as compact as possible, they are not fitted with dedicated power supply sockets. The power supply should always be connected to one of the front servo outputs; use a Y-lead if none of these sockets is vacant. The data sockets of the **PBR-7S** and **PBR-9D** should not be used for the power supply, as the maximum current they can handle is 5A.

4. BINDING

The transceivers can be bound using either of two methods:

a) Connect the transceiver first

The LED now flashes rapidly for about ten seconds. Press "Bind" at the transmitter, and the transmitter and receiver are bound. If you do not press Bind within ten seconds, the receiver LED switches to a slower flashing rate. At this point the receiver can no longer be bound to the transmitter unless the power supply is first disconnected.

b) Press "Bind" at the transmitter first

After this you connect the receiver to a power supply: the transmitter now binds with the receiver.

5. DETAILED DESCRIPTION OF THE SOCKETS

a) PWM outputs

The PWM outputs are sequentially numbered from 1 - XX, but are also assigned the letters A - I. As an option, you can also set the receiver outputs to generate different channel numbers. For example, the **PBR-9D** can be set to generate outputs 10 - 19 as well as channels 1 - 9.

b) P²-BUS

This interface is used for the external ultra-fast P²-BUS telemetry system and digital servo output. When the system is switched on, all the sensors connected to this socket are scanned, and displayed at the transmitter. The P²-BUS socket can also be used for updating the receiver using the **USB interface adapter**.

c) FastTrack / Data

This socket can be set to various functions from the transmitter: you can set it to FastTrack, P2BusOUT, S.BUS, SRXL-16, PPM12 or even one further servo output.

• FastTrack:

The **iGyro SAT** or a supplementary satellite receiver (**PBR-26D** or **PBR-26XS**) can be connected to this socket. FastTrack is a high-speed real-time bus system. If you wish to use both the **iGyro SAT** and the optional satellite receiver simultaneously, they can simply be connected using a Y-lead. Once an **iGyro SAT** is connected, you have a six-axis iGyro system whose full range of functions can be adjusted from the transmitter.

• P2BusOUT:

The purpose of this option is to feed telemetry data wirelessly from the model to ground stations, as are typically used in Triangle flying events. The receiver "listens" to the radio traffic between the transmitter and the receiver in the model, and passes on the telemetry information from the model to the connected ground station.

• PWM:

If you select this option, you can connect an additional servo to the **FastTrack/Data** socket. The channel generated varies according to the type of receiver you are using. For example, if your receiver is a **PBR-9D**, then channel 10 is available at this socket.

• S.BUS and SRXL-16:

These digital bus signals can be processed by many gyros and battery backers, and therefore serve as a universal interface for third-party accessories such as helicopter gyros.

• PPM12:

As of version V3.5, all receivers also offer the option of generating an analogue PPM12 signal. One practical application for this is a wireless connection for PC flight simulators.

6. MEANING OF THE LED DISPLAY

The integral LED can indicate various types of receiver status:

- Continuous green or blue light: the transceiver is bound to the transmitter; signal strength is adequate
- Flashing rapidly green or blue: the transceiver is waiting for a binding signal
- Flashing slowly red: the receiver is picking up no signal
- Continuous red light: the update has failed, and the receiver is in bootloader mode. Use the Rescue mode to restart the update process.

7. INSTALLATION, DEPLOYING THE AERIALS

All PowerBox receivers pcb's are manufactured using the SMT method, and are therefore extremely resistant to vibration and shock. In most models the receivers can simply be attached to a smooth surface inside the model using double-sided adhesive tape.

The ideal method of aerial deployment varies greatly according to the model, the fuselage material and the receiver's position in the model. For most cases we recommend routing the aerials out of the fuselage, as this guarantees optimum reception regardless of the materials of which the model is made.

8. OTHER SETTINGS

The transceivers offer a number of optional settings which can be selected at the transmitter and sent via the radio link:

• **Framerate**

This defines the servo signal repeat frequency. The default value for this setting is 18ms. Modern digital servos can operate more accurately and smoothly at 12ms.

• **A Start Output**

Offsetting the Start channel. This feature can be used to "cascade" receivers. For example, you can set up a **PBR-9D** to generate channels 1 - 9, and an additional **PBR-7S** for channels 10 - 16.

• **Hold/Failsafe**

This setting is adjusted in the Function menu at the transmitter, and not at the receiver.

• **iGyro**

You can find a detailed description of the iGyro's features in the instructions supplied with the **iGyro SAT**. The iGyro function integrated into PowerBox receivers is completely identical to the iGyro function in our larger PowerBox systems or the **iGyro 3xtra**.

9. NOTES ON OPERATION

All **PowerBox** transceivers are able to transmit battery voltage and reception quality by default. The following values are transmitted:

• **Battery voltage**

This shows the voltage present at the servo sockets. Please note: if you are using a regulated battery backer, the value shown here is the regulated voltage, not the battery voltage.

- **RSSI**

This value shows the input level at the aerial, and is displayed in dBm - a logarithmic power value.

- **LQI**

This value indicates the reception quality in percentage form. The value is calculated by the receiver, based on the number of lost data packets and the power level over time.

LQI is a very instructive value providing information about the quality of the radio link. In order to monitor it fully, we recommend that you set up a widget at the Telemetry screen showing the LQI value, and set an alarm threshold of 60% to 70%. This ensures that any reception problem immediately triggers an alarm to make you aware of the situation.

As of **version 3.5** an additional LQI value is available which calculates the LQI value taking both aerials into account. The assessment only takes into account those data packets which are lost at both aerials simultaneously.

- **Status**

This displays status messages, such as the status of an **iGyro SAT** or **GPSIII** connected to the system.

10. SPECIFICATION

	PBR-5XS	PBR-5S	PBR-7S	PBR-9D	PBR-10SL	PBR-26XS	PBR-26D
Frequency	2.4 GHz						
Operating voltage	4,0 – 9,0 V						
Number of transmitted channels	26 (at the P ² BUS interface)						
Number of PWM outputs	5	5	7	9	10	0	0 (1)
Servo output resolution	4096 Steps (12 Bit)						
Number of receive units	1	1	1	2	1	1	2
Range (line of sight)	> 1 km	> 9 km					
Telemetry	yes						

P ² BUS telemetry interface	yes	yes	yes	yes	yes	yes	yes
FastTrack interface	no	no	yes	yes	yes	yes	yes
Parameter settings from the radio	yes	yes	yes	yes	yes	yes	yes
Dimensions in mm	32 x 18 x 4	44 x 20 x 12	52 x 22 x 12	57 x 27 x 12	60 x 18 x 10	48 x 13 x 4	48 x 25 x 10
Weight in gram	2 g	7 g	12 g	17 g	12 g	3 g	10 g
Temperature range	-10 °C to + 85 °C						

11. FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

12. IC

This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Appareils radio exempts de licence (ISDE) L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

13. RF EXPOSURE STATEMENT (PORTABLE DEVICE)

This device complies with the RF exposure requirements for portable devices. The device is intended for hand-held use, with the transmitter antennas kept more than 30mm from the hands in normal use.

13. DÉCLARATION D'EXPOSITION AUX RF (APPAREIL PORTABLE)

Cet appareil est conforme aux exigences d'exposition aux RF pour les appareils portables. L'appareil est destiné à être utilisé à la main, les antennes de l'émetteur étant maintenues à plus de 30 mm des mains en utilisation normale.

14. SET CONTENTS

- PowerBox receiver
- adhesive pad

15. SERVICE NOTE

We make every effort to provide a good service to our customers, and have established a Support Forum which covers all queries relating to our products. It gives you the opportunity to obtain help quickly all round the clock - even at weekends. All the answers are provided by the **PowerBox Team**, guaranteeing that the information is correct.

Please use the Support Forum **before** you contact us by telephone:

www.forum.powerbox-systems.com



16. GUARANTEE CONDITIONS

We are able to grant a **24 month guarantee** on our **PowerBox receiver** from the initial date of purchase. The guarantee covers proven material faults, which will be corrected by us at no charge to you. The guarantee does not cover damage caused by incorrect usage, e.g. reverse polarity, excessive vibration, excessive voltage, damp, fuel, and short-circuits. The same applies to defects due to severe wear.

17. LIABILITY EXCLUSION

We are not in a position to ensure that you observe our instructions regarding installation of the **Power-Box receiver**, fulfil the recommended conditions when using the unit, or maintain the entire radio control system competently.

For this reason we deny liability for loss, damage or costs which arise due to the use or operation of the **Power-Box receiver**, or which are connected with such use in any way. Regardless of the legal arguments employed, our obligation to pay damages is limited to the invoice total of our products which were involved in the event, insofar as this is deemed legally permissible.

We wish you loads of fun with your new **PowerBox receiver**!

A handwritten signature in blue ink, appearing to be 'D. R.', located below the text of the letter.

Donauwörth, April 2023

PowerBox-Systems GmbH

Ludwig-Auer-Straße 5
86609 Donauwörth
Germany

 +49-906-99 99 9-200

www.powerbox-systems.com